IVDM-20 DC Voltage Detection Module

User Manual



Preface

Thank you for choosing INVT IVDM-20 DC voltage detection module.

IVDM-20 DC voltage detection module is mainly used in DC-DC bidirectional DC power supply products to detect the input and output voltage and current of the system. It needs to be used with the GD880 series VFD control box. The module transmits the detection signal to the control box through optical fibers, achieving monitoring of system voltage and current.

This manual describes the product overview, installation, wiring, and commissioning instructions. Before installing the VFD, read this manual carefully to ensure the proper installation and running with the excellent performance and powerful functions into full play


Product features:


- Supports one DC voltage detection of 0-1000VDC
- Supports two voltage type open-loop Hall current detection
- Adopts optical-fiber communication, enabling fast and stable communication rate
- Supports wall mounting method and DIN rail mounting method, easy to mount or dismount

1 Product overview

1.1 Model description

Figure 1-1 Product nameplate and model designation

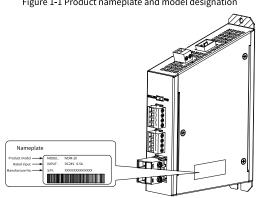

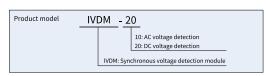

-1-

1.2 Specifications

Table 1-1 Specifications

Parameters	Specification
Working temperature	-10-+50°C
Storage temperature	-10-+60°C
Relative humidity	5%–95% (No condensation)
Running environment	No corrosive gas
Installation method	Wall mounting and DIN rail mounting
IP rating	IP20
Heat dissipation method	Natural air cooling

1.3 Technical parameters

Table 1-2 Technical parameters

Parameters	Specification
Supply voltage/current	24V±5%/0.5A
Communication connection mode	Optical-fiber communication
Voltage detection	0-1000VDC
Current sampling	Two voltage type open-loop Hall current sensor

1.4 Structure

Figure 1-2 Structure diagram

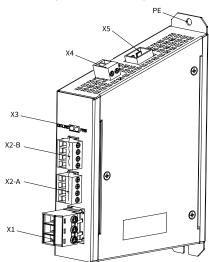


Table 1-3 Component description

No.	Symbol	Name	Description		
1	X1	DC voltage	Input voltage range: 0–1000VDC		
1	ΧI	detection terminal	Cable cross-sectional area: 0.5–2.5mm²		
2	X2-A	Current detection terminal A	Current detection Hall component wiring terminal a Cable cross-sectional area: 0.5–2.5mm ² Use shielded four-core twisted-pair cable with bot ends grounded. The total length of the cable is lest than 1.5m.		
3	Х2-В	Current detection terminal B	Current detection Hall component wiring terminal B Cable cross-sectional area: 0.5–2.5mm ² Use shielded four-core twisted-pair cable with both ends grounded. The total length of the cable is less than 1.5m.		
4	Х3	Status indicator	 PWR power supply status indicator Red LED ON: Power supply is connected. Red LED OFF: The module is not powered on or the power supply is abnormal. ONLINE operation status indicator Red LED flashes: Abnormal. Red LED OFF: Normal. 		
5	X4	24VDC power input terminal	Externally powered: 24VDC±5%/200mA Two-core twisted-pair cable is recommended. Cable cross-sectional area: 0.5–2.5mm²		
6	X5	Optical fiber connection terminal	The expansion module communicates with the control box through optical fiber. Plastic optical fiber		

2 Installation and wiring

2.1 Installation precautions



Make sure the device have been powered off before installation.

Note

- Prevent the module from falling or shock to avoid damage.
- Do not disassemble the module to avoid damage.
- Please tighten the screws according to the required torque to avoid damage or looseness.
- Required tools: Phillips screwdriver PH1, straight screwdriver SL3.


Table 2-1 Screw torque requirements

Screw size	Fastening torque	
M3	0.55 N ⋅ m	
M4	1.2 N • m	

2.2 Dimensions

The dimensions of the DC voltage detection module is $37.4 \times 113 \times 180$ mm (W*D*H), as shown in Figure 2-1.

Figure 2-1 Product outline and mounting dimensions diagram (unit: mm)

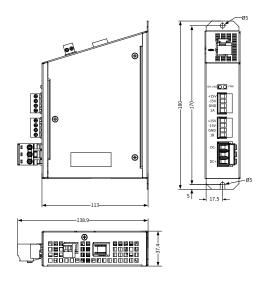


2.3 Mounting and dismounting

The product supports wall mounting and DIN rail mounting.

2.3.1 Wall mounting and dismounting

Mounting instructions

Align the installation holes and tighten the screws.

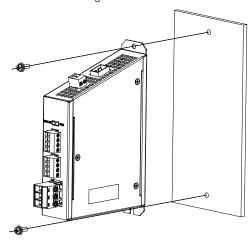

∠Note:

- Ensure that all terminals and fiber optic plugs are installed in place for effective electrical connection.
- The module is grounded through contact between its exposed metal shell and the assembly board inside the cabinet, so the assembly board must be an exposed metal plate. To ensure the reliable operation of the module and meet the EMC requirements, please tighten the screws to ensure reliable grounding.

-2-

• Dismounting instructions

Step 1 $\;$ Disconnect the power supply and disassemble all cables connected to the expansion module.


Step 2 Use a Phillips screwdriver to remove the grounding screw of the module.

Step 3 Pull the module out to a suitable position.


2.3.2 DIN rail mounting and dismounting

• Mounting instructions

Hold the IVDM-10 module, place the rail slot upper part of the module on the rail obliquely, and snap the rail slot lower part of the module in the arrow direction to fully secure the rail slot \odot to the rail \odot .

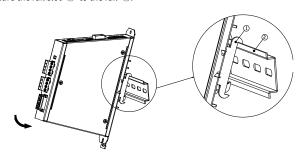


The following figure shows the Installation effect of the DIN rail mounting.

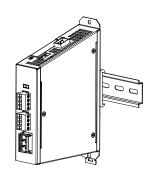


• Dismounting instructions

Step 1 Disconnect from the power supply, and remove all cables from this module. Step 2 Press with a straight screwdriver ① downward to remove the rail ②.

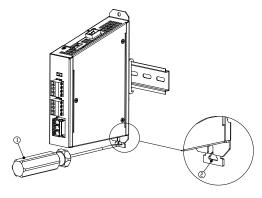

Step 3 Rotate the module in the arrow direction to completely remove the rail slot $\ 3$ of the module from the rail $\ 4$.

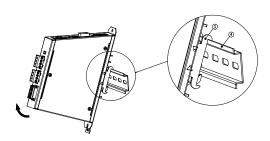

2.4 User's wiring terminal

Figure 2-2 IVDM-20 appearance diagram

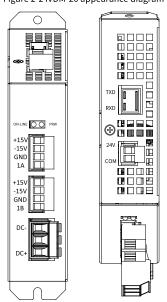


Table 2-2 X1 terminal function definition

X1 terminal definition	Terminal name	Specifications	
DC+	Voltage input+	Innut valtage range: 0, 1000VDC	
DC-	Voltage input-	Input voltage range: 0–1000VDC	

Note: The positive and negative DC voltage wiring on the IVDM-20 must match the positive and negative poles of DC-DC output wires.

Table 2-3 X2 terminal function definition

X2 terminal definition Terminal name		Specifications
+15V	+15VDC voltage	
-15V	-15VDC voltage	Power output
GND	Power ground	
IA/IB	Hall current detection	Detects the current input
IA/ID	input terminal	betects the current input

Table 2-4 X3 terminal function definition

X3 terminal definition	Terminal name	Specifications		
PWR	Power supply status indicator	 Red LED ON: Power supply is connected. Red LED OFF: The module is not powered on or the power supply is abnormal. 		
ONLINE	State indicator	Red LED flashes: Abnormal.Red LED OFF: Normal.		

Table 2-5 X4 terminal function definition


X4 terminal definition	Terminal name	Specifications	
24V	24VDC power supply	Futamally navious d. 24VDC + F0/ /0 FA	
COM	Power ground	Externally powered: 24VDC±5%/0.5A	

Table 2-6 X5 terminal function definition

X5 terminal definition	Terminal name	Specifications	
RXD	Receiving optical fiber		
TXD	Transmitting optical fiber	Plastic optical fiber	

The IVDM-20 DC voltage detection module is connected to the fiber optic expansion module EC-TX821/TX823 through optical fibers, transmitting the detection signal to the control box. Figure 2-3 shows the external wiring diagram of the IVDM-20 module, taking the fiber optic expansion module EC-TX823 as an example:

Figure 2-3 External wiring diagram when using IVDM-20

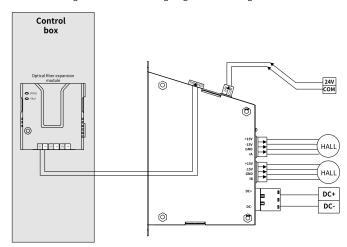

2.5 Wiring precautions

- It is recommended to place the fiber optic expansion module EC-TX821/TX823 at expansion slot 2 and slot 3 of the control box.
- Handle the optical fibers with care to prevent the fiber optic cable and connector damage, and keep the connector clean.
- Ensure that the direction of the connector is correct when installing. Align and insert
 the connector into the interface until the "click" sound is heard, indicating it has been
 installed.
- When disassembling, grip the connector tightly and pull it out. Do not directly pull the
 optical fiber cable.

3 Commissioning instruction

Figure 3-1 IVDM-20 configuration flowchart

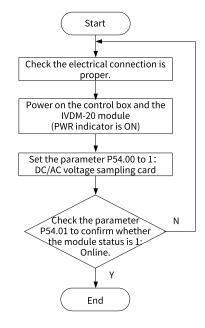


Table 3-1 Function code parameters related to IVDM-20

Function code	Name	Description		Setting range	Default
P54.00	Module type	0: One-expand-three expansion modules 1: DC/AC voltage sampling card		0-1	1
P54.01	Module online status	Bit0-Bit5	Online status of modules in expansion slots (0: Offline 1: Online)	0-1	0

∠Note: For other parameter settings of the IVDM-20 DC voltage detection module, see software manuals of the GD880 series rectifier unit.

