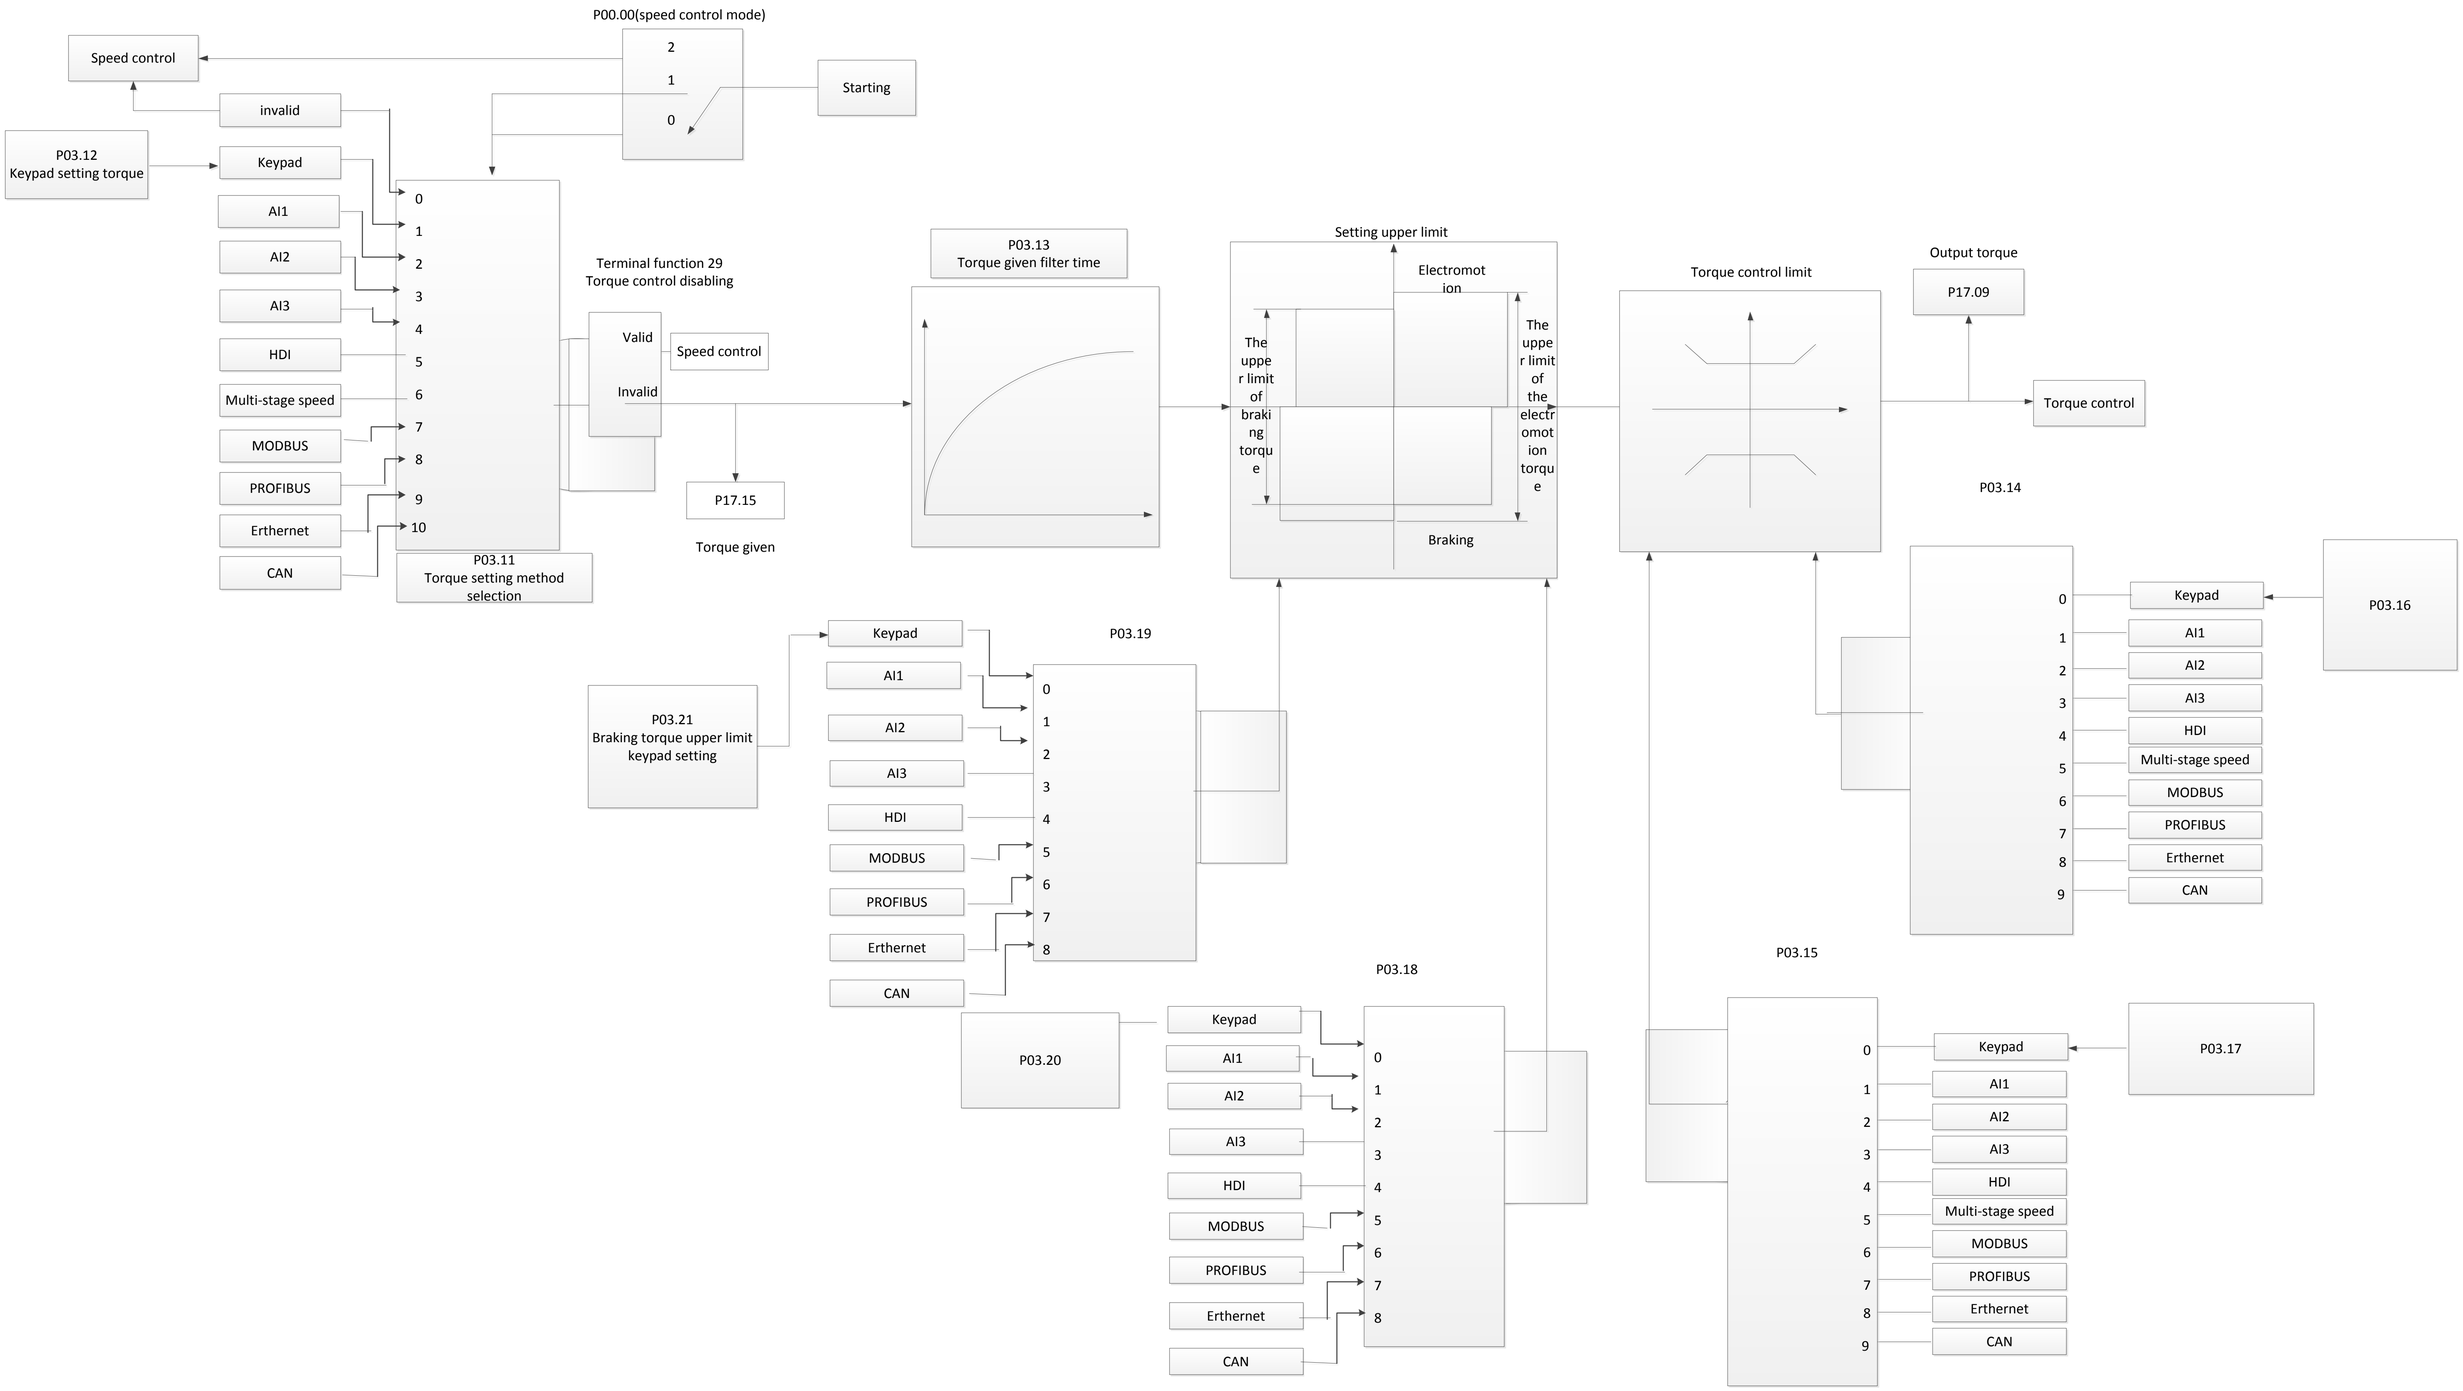
P00.00(speed control mode)
2
1
0
Speed control
Starting
invalid
P03.12
Keypad setting torque
Keypad
AI1
AI2
AI3
HDI
Multi-stage speed
MODBUS
PROFIBUS
Erthernet
CAN
0
1
2
3
4
5
6
7
8
9
10
P03.11
Torque setting method selection
Terminal function 29
Torque control disabling
Valid
Invalid
Speed control
P17.15
Torque given
P03.13
Torque given filter time
Setting upper limit
Electromotion
The upper limit of braking torque
The upper limit of the electromotion torque
Braking
Torque control limit
Output torque
P17.09
Torque control
P03.14
P03.16
P03.15
P03.17
P03.19
P03.21
Braking torque upper limit keypad setting
P03.18
P03.20